

Check & Foot Valve Installation

 merrillmfg.com/product/check-foot-valve-installation

- 1) Use pipe sealant paste compatible with pipe.
- 2) Put wrench on end of valve and pipe, both ends separately.
- 3) Turn pipe 1/2 to 1 turn maximum past hand tight.

Correct Valve Installation

Wrong Installation Method - Voids Warranty

All Merrill Manufacturing™ check valves and foot valves - water, oil or gas - working pressure 200 psi, maximum operating temperature 190° F (87° C).

Copyright © 2016, Merrill Mfg.

